

Move the lock



Remove the two screws for the lock at the reverse side of the post.



Turn the lock 180°



Replace the screws.

Move the handle



Remove the two screws for the handle at the reverse side of the post.



Move the handle to the left side.




Replace the screws.

Change the door

for opening at the right side
(Straight door, item IS-DOOR-S)




Standard opening

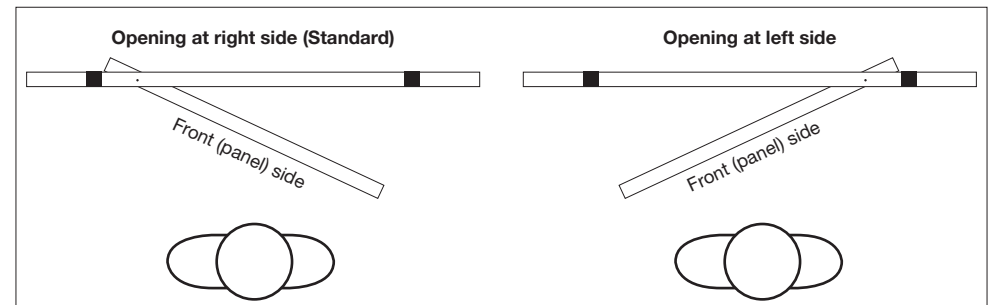


Standard configuration

with opening at the right side

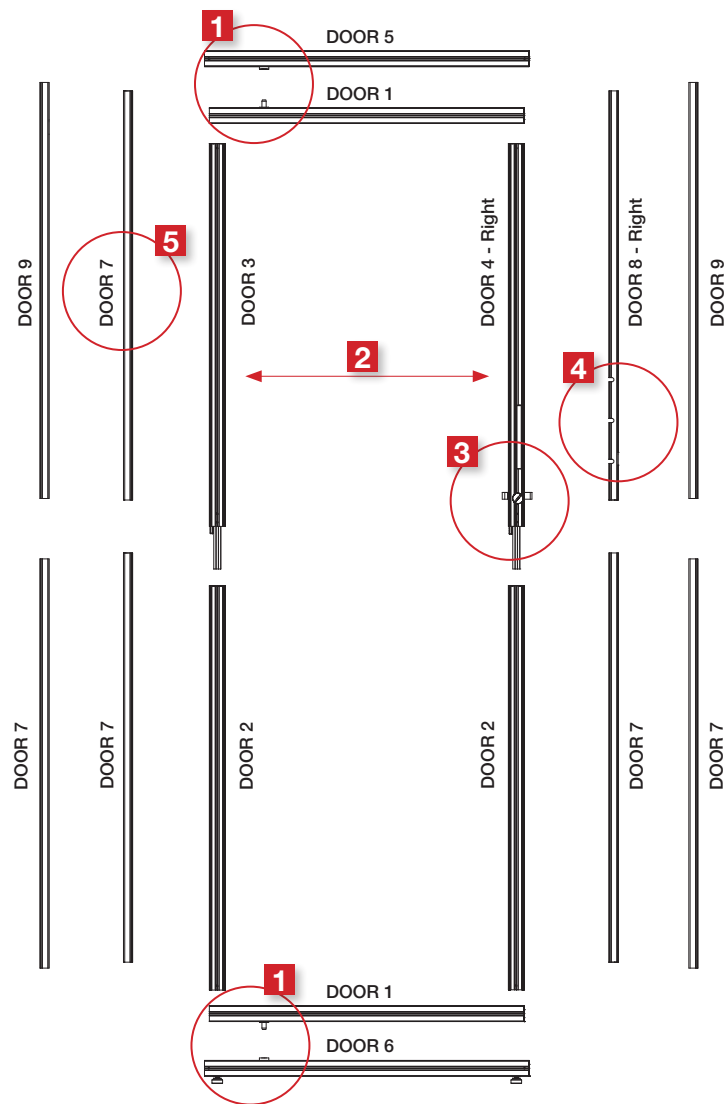

New configuration

with opening at the left side

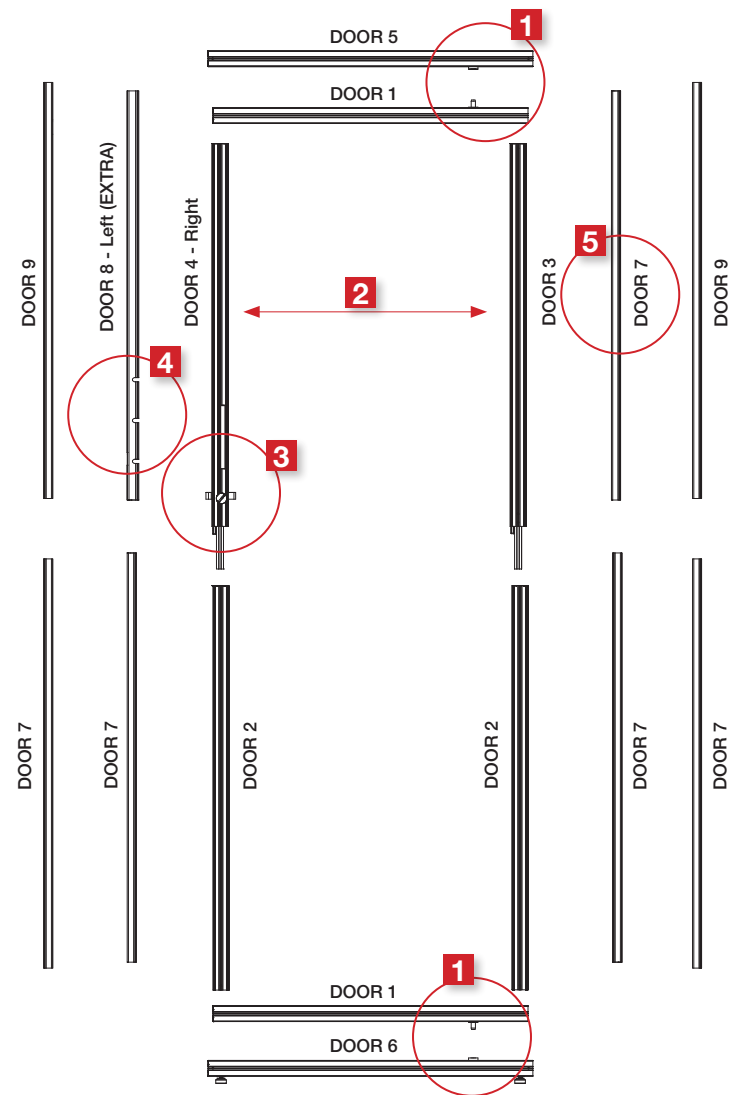

1. Flip the beams DOOR 1, DOOR 5 and DOOR 6 horizontally
2. Exchange the post DOOR 3 and DOOR 4 with each other
3. Change the handle and the lock (see page 4)
4. Delete the corner trim DOOR 8-RIGHT and place the DOOR 8-LEFT in the left side
5. Move the top corner trim DOOR 7 to the right side

Move the lock



1 Remove the two screws for the lock at the reverse side of the post.



2 Turn the lock 180°



3 Replace the screws.

Move the handle



1 Remove the two screws for the handle at the reverse side of the post.



2 Move the handle to the left side.




3 Replace the screws.

Change the door

for opening at the right side
(Outer curved door 30°, item IS-DOOR-30)




Standard opening

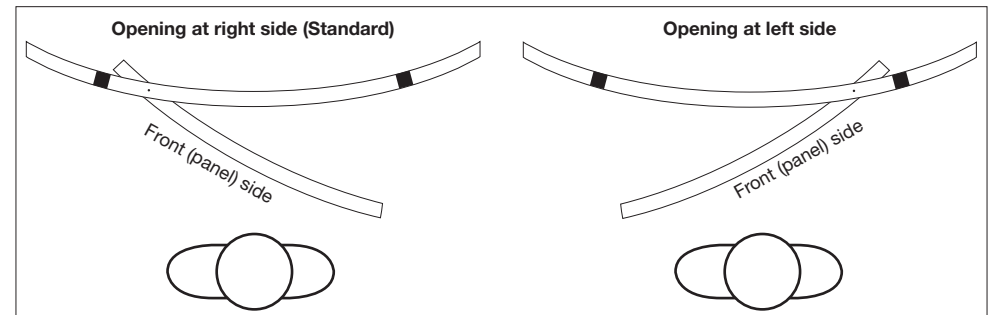


Standard configuration

with opening at the right side

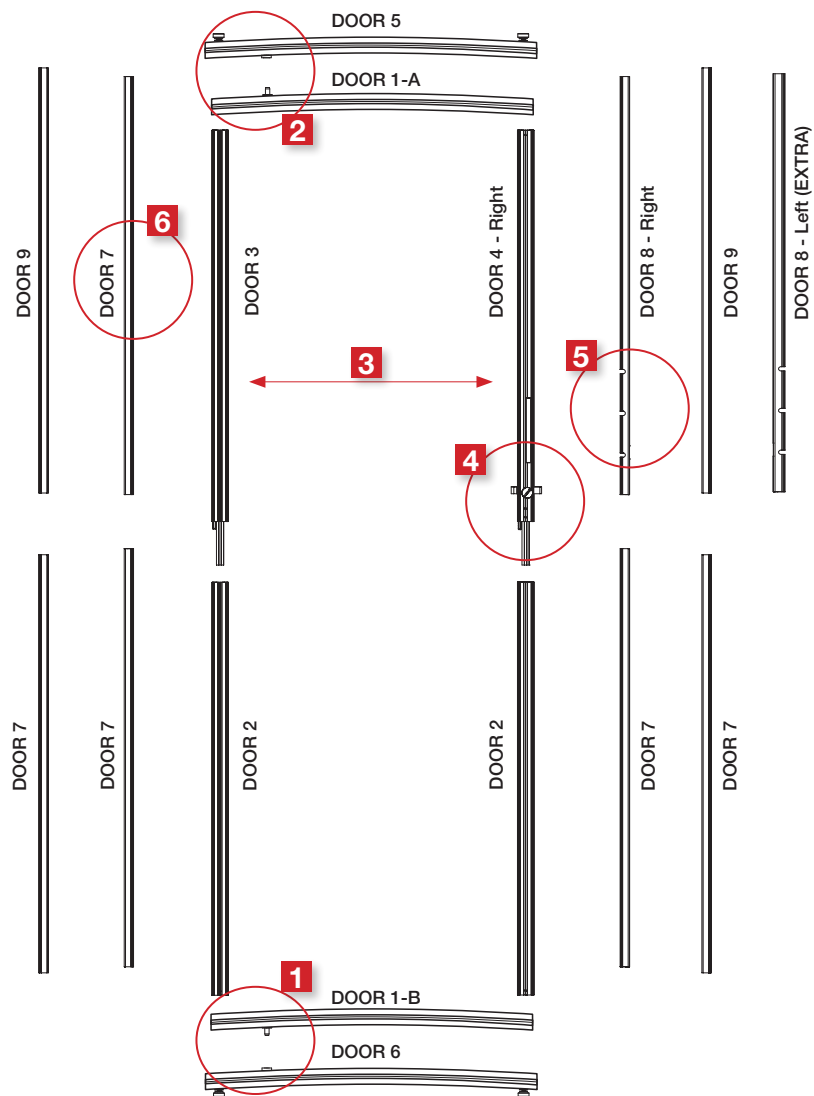

New configuration

with opening at the left side

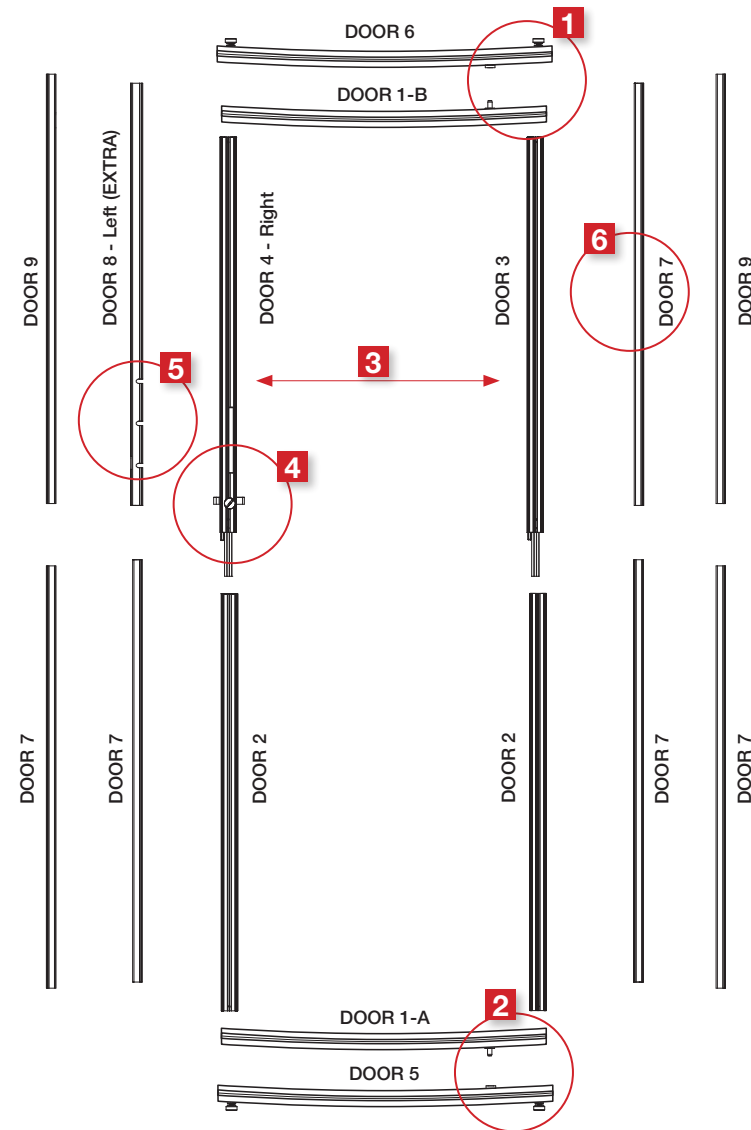

1. Rotate 180° the beams DOOR 1-B and DOOR 6 and move to the top
2. Rotate 180° the beams DOOR 1-A and DOOR 5 and move to the bottom.
3. Exchange the post DOOR 3 and DOOR 4 with each other
4. Change the handle and the lock (see page 4)
5. Delete the corner trim DOOR 8-RIGHT and place the DOOR 8-LEFT in the left side
6. Move the top corner trim DOOR 7 to the right side

Move the lock



1 Remove the two screws for the lock at the reverse side of the post.



2 Turn the lock 180°



3 Replace the screws.

Move the handle



1 Remove the two screws for the handle at the reverse side of the post.




2 Move the handle to the left side.



3 Replace the screws.

Change the door


inside curve for opening at the left side
(Outer curved door 30°, item IS-DOOR-30)

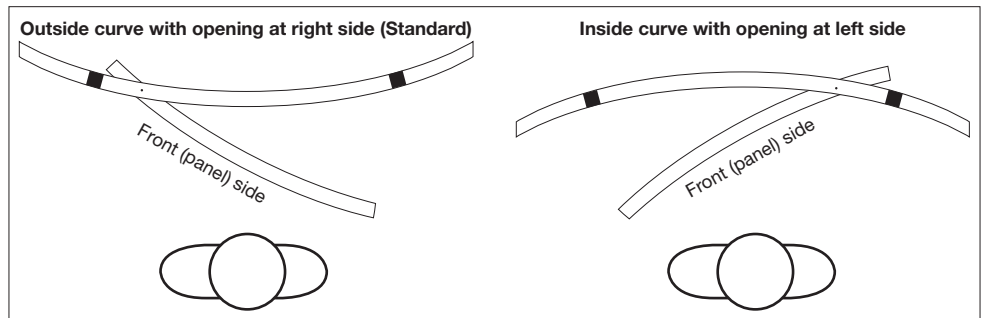

Please observe: This configuration needs new panel sizes, see page 3!

Standard configuration


with opening at the right side

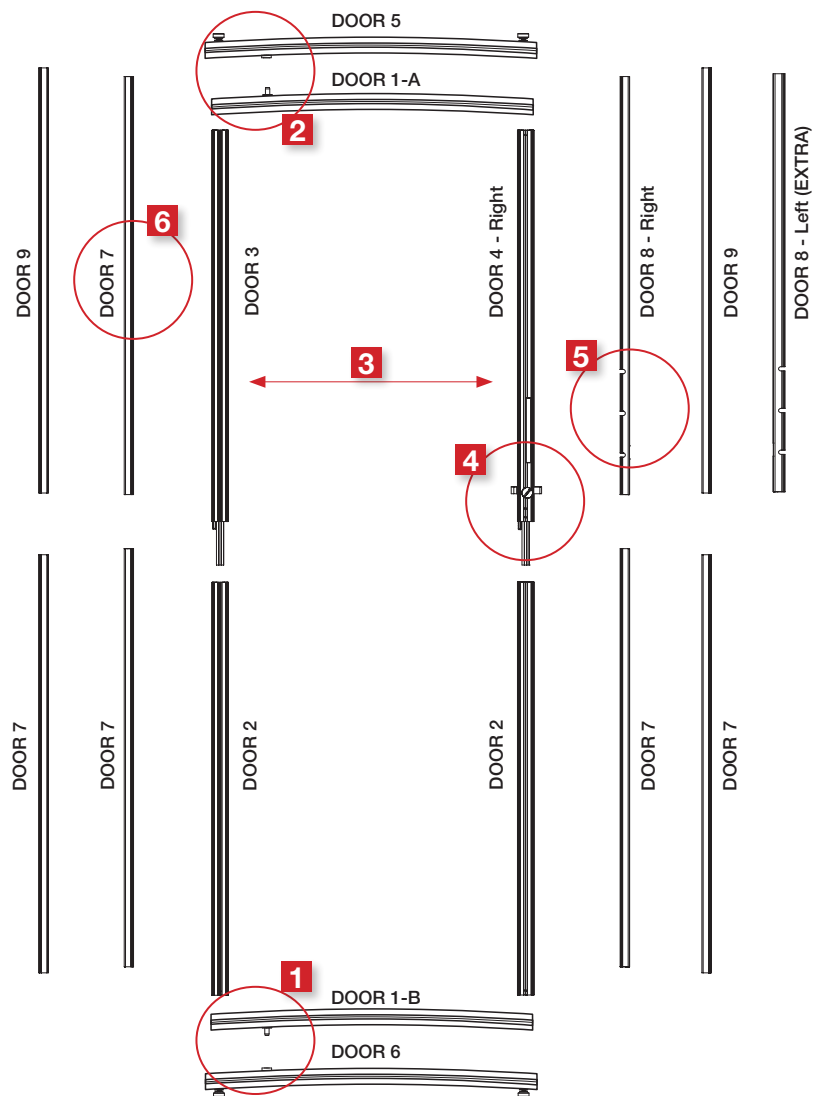

1. Rotate 180° the beams DOOR 1-B and DOOR 6.
2. Rotate 180° the beams DOOR 1-A and DOOR 5.
3. Exchange the post DOOR 3 and DOOR 4 with each other
4. Change the handle and the lock (see page 4)
5. Delete the corner trim DOOR 8-RIGHT and place the DOOR 8-LEFT in the left side
6. Move the top corner trim DOOR 7 to the right side

New configuration

Inside curve with opening at the left side

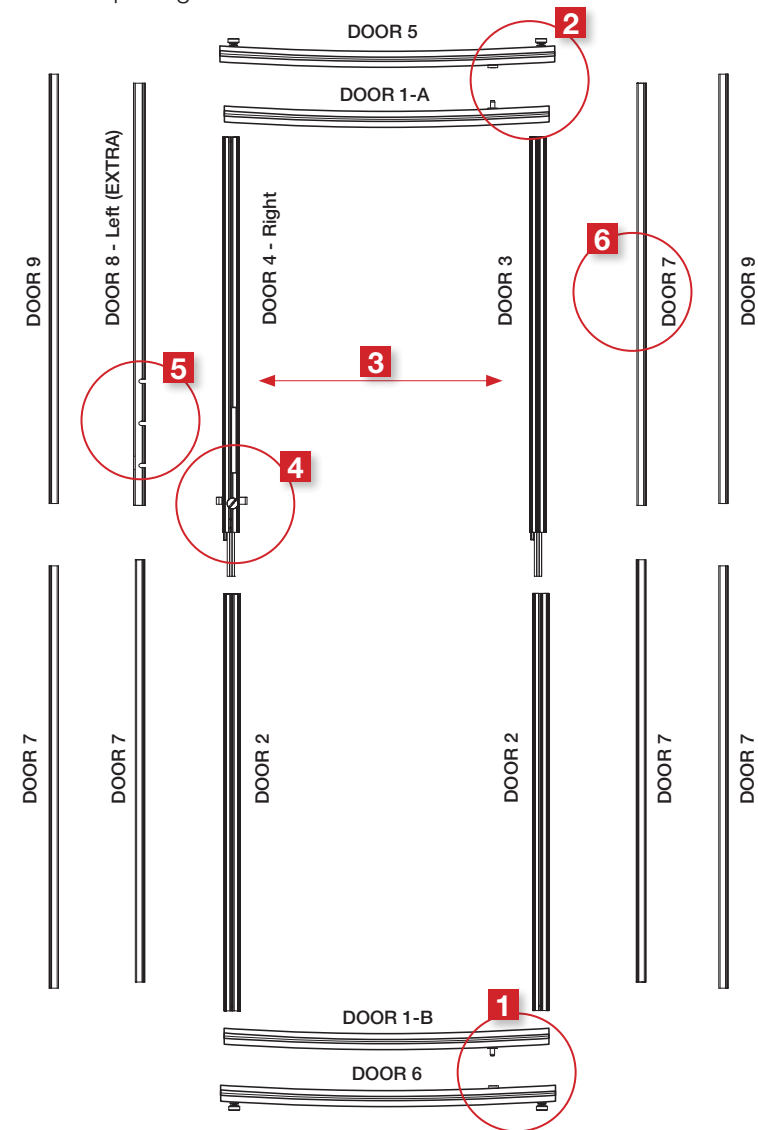

Graphic panel sizes

Graphic over the door.

The graphic over the door will be 779 mm / 30.67" wide.

Graphic for the door.

The graphic for the door will be 680 mm / 26.77" wide and 1925 mm / 75.79" high

