

Circular Counter

Item.no IS-FT03

Complete with:
4 posts, 1 top shelf,
1 bottom shelf, 4 feet

Extra:
1 middle shelf, Item IS-FS03



1

Screw in the 4 adjustable feet.



2



Attach the four posts and lock the bottom clamps.

3 Extra

Add the middle shelf if desired. (Sold separately)



4



Attach the table top and lock the top clamps

5



Mount the graphic panel.

6




Ready to go!



ISOframe[®] counters


Graphic production

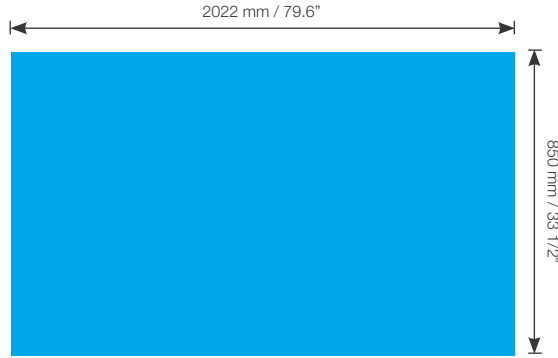

Graphic panel attachments

Accessories

Magnetic tape (not incl.)
12 mm/0.5" A tape, 30 m / 98 ft. DM-013-AC
Each panel needs 6 m/20 ft. (in the midi size)

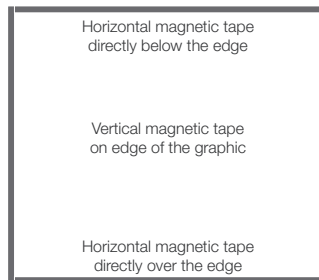

Printer material

We recommend the following material:

Poster paper: 180 gr / 0.4 lb.

The printed graphic panels must be laminated before use.
Front side: 125 microns (0,125 mm) / 0.005" "deep crystal"
Reverse side: 250 microns (0,250 mm) /0.010" "stop light"

Polyester film: 330-370 microns (0,350 mm) / 0.013-0.015"
Top laminate: 125 microns (0,125 mm) / 0.005" "deep crystal"

Mounting of Magnetic Tape

Magnetic tape to be fixed vertically along each side of the graphic panels.

IMPORTANT Carefully mount the magnetic tape slightly inset from the edge of the graphic panel by approximately 0,25 mm / 0.010". Once mounted, a very thin straight white line should show between the edge of the graphic and the outside edge of the magnetic tape. Do not exceed 0,5 mm / 0.020".

Application Techniques

To obtain optimum adhesion, the bonding surfaces must be well unified, clean and dry. Typical surface cleaning solvents are isopropyl alcohol/water mixture (rubbing alcohol) or heptane.

Note: Be sure to follow solvent manufacturer's precautions and directions for use when using solvents.



Mark Bric Display Corp.

North America Tel. 800.742.6275 Fax 800.565.9506 E-mail: markbric@markbric.com

Mark Bric Display AB

Worldwide Headquarters Tel. +46 33 480 460 Fax +46 33 480 470 E-mail: display@markbric.se