

### Rectangular Counter


Item.no IS-FT02

**Complete with:**  
4 posts, 1 top shelf,  
1 bottom shelf, 4 feets

**Extra:**  
1 middle shelf,  
Item.no IS-FTS-02



**Extra:**  
Transport bag  
Item.no IS-FB02

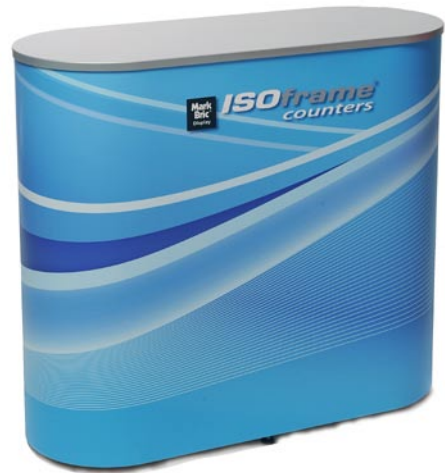

Screw in the 4 adjustable feets.



Attach the 4 posts and lock the bottom clamps.



3 Extra  
Add the middle shelf if desired.  
(Sold separately)



Attach the table top and lock the top clamps




Mount the graphic panel.




Ready to go!

## Graphic production

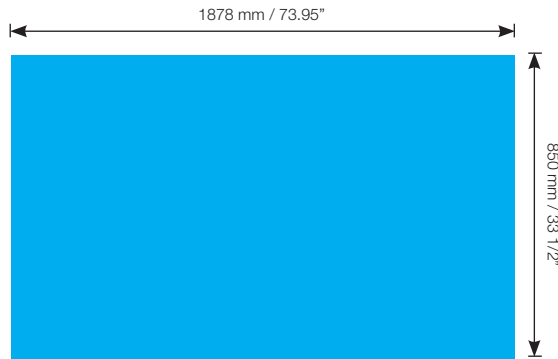

## Graphic panel attachments

**Magnetic tape** (not incl.)  
12 mm/0.5" A tape, 30 m / 98 ft. DM-013-AC

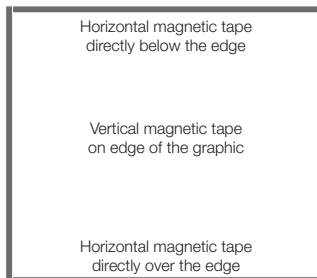

### Printer material

We recommend the following material:

**Poster paper:** 180 gr / 0.4 lb.

*The printed graphic panels must be laminated before use.*  
Front side: 125 microns (0,125 mm) / 0.005" "deep crystal"  
Reverse side: 250 microns (0,250 mm) / 0.010" "stop light"

**Polyester film:** 330-370 microns (0,350 mm) / 0.013-0.015"  
Top laminate: 125 microns (0,125 mm) / 0.005" "deep crystal"

### Mounting of Magnetic Tape

Magnetic tape to be fixed **horizontally** and **vertically** along each side of the graphic panels.

**IMPORTANT** Carefully mount the magnetic tape slightly inset from the edge of the graphic panel by approximately 0,25 mm / 0.010". Once mounted, a very thin straight white line should show between the edge of the graphic and the outside edge of the magnetic tape. Do not exceed 0,5 mm / 0.020".

### Application Techniques

To obtain optimum adhesion, the bonding surfaces must be well unified, clean and dry. Typical surface cleaning solvents are isopropyl alcohol/water mixture (rubbing alcohol) or heptane.

Note: Be sure to follow solvent manufacturer's precautions and directions for use when using solvents.